



112 M Street  
Anniston, AL 36201  
Phone: 256-238-1555  
Toll Free: 877-604-7273  
Fax: 256-236-2335  
mariespoolstore.com

# Pump Priming Instructions

**PURPOSE:** To establish a continuous flow of water from pool through the pump.

**FREQUENCY:** When pump is turned off and loses prime.

**PROCEDURE:**

1. Switch pump motor OFF.
2. Close main drain, skimmer, and vacuum valves.
3. Remove strainer lid from pump housing.
4. Check Basket for debris, clean if needed.
5. Replace basket and fill housing with water.
6. Replace strainer lid (be sure o-ring is intact).
7. Switch pump on and open skimmer or main drain valve.
8. If pump does not prime or prime is lost, repeat this procedure.

**WARNING:**

Failure to maintain a continuous flow of water will result in damage or failure of the pump and will void all warranties.