

112 M Street Anniston, AL 36201 Phone: 256-238-1555 Toll Free: 877-604-7273

Fax: 256-236-2335 mariespoolstore.com

## Vacuum Instructions

PURPOSE: To remove debris or algae from pool wall and floor.

FREQUENCY: As needed or after an algae treatment.

PROCEDURE (for vacuuming regular debris):

FILTER VALVE POSITION: "Filter"

- 1. Clean pump strainer basket, and backwash the filter.
- 2. Attach telescopic pole and vacuum hose to vacuum head.
- 3. Place vacuum head in pool resting on floor.
- 4. Uncurl vacuum hose and remove air from hose by holding the end over a return fitting so it will fill with water.
- 5. Attach hose to vacuum plate in skimmer which fits over the skimmer basket.
- 6. If pool is equipped with a main drain, you may have to close off the main drain partially or fully to achieve enough suction.
- 7. Slowly move the vacuum over the area to be cleaned.
- 8. When finished, (open the main drain valve if needed) disconnect vacuum hose from plate and drain water from hose. Store equipment out of the sun.
- 9. Clean skimmer basket and pump basket and backwash filter.

## PRODECURE (for vacuuming algae):

- 1. Clean pump strainer basket, and backwash the filter.
- 2. Attach telescopic pole and vacuum hose to vacuum head.
- 3. Place vacuum head in pool resting on floor.
- 4. Uncurl vacuum hose and remove air from hose by holding the end over a return fitting so it will fill with water.
- 5. Attach hose to vacuum plate in skimmer which fits over the skimmer basket.
- 6. If pool is equipped with a main drain, you may have to close off the main drain partially or fully to achieve enough suction.
- 7. Switch pump motor OFF and turn dial valve to "waste." Switch pump motor ON.
- 8. Slowly move the vacuum over the area to be cleaned.
- 9. When finished, (open the main drain valve if needed) disconnect vacuum hose from plate and drain water from hose. Store equipment out of the sun.
- 10. Clean skimmer basket and pump basket.

## **WARNING:**

Never raise vacuum head out of water while vacuuming, as this will cause loss of prime. Never vacuum with filter in the "backwash" position.